

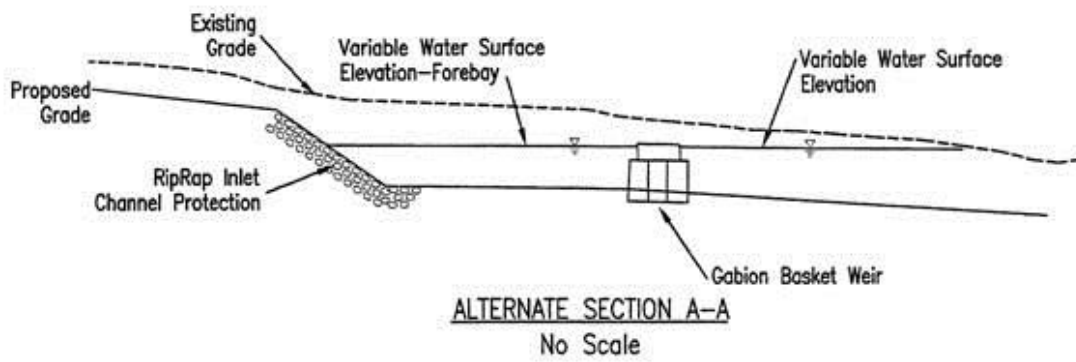
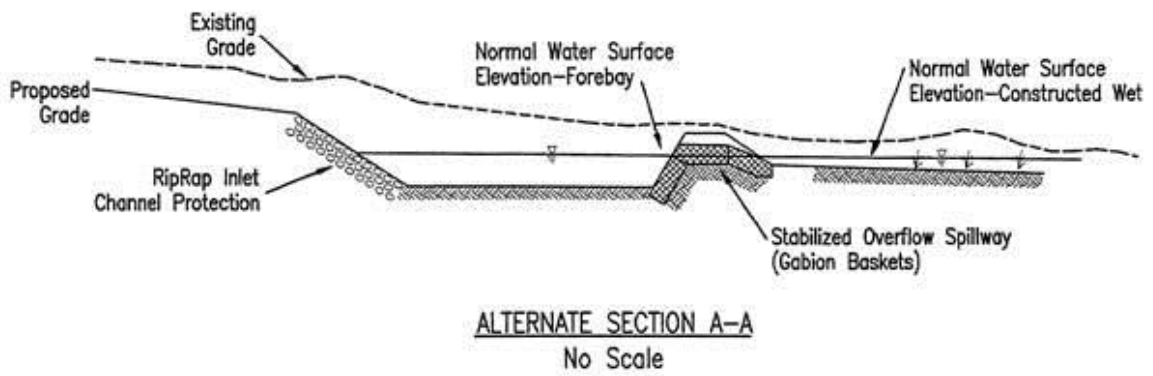


EXAMPLE OF SILT TRAPS THAT WILL BE INSTALLED ALONG STORMWATER MANAGEMENT SYSTEM

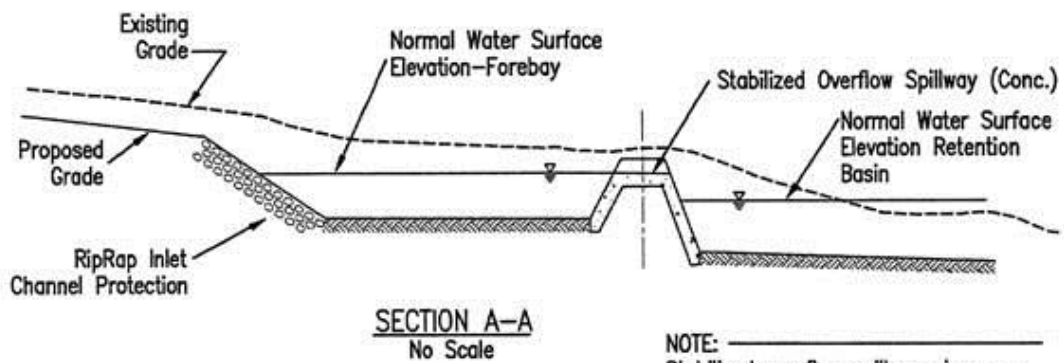

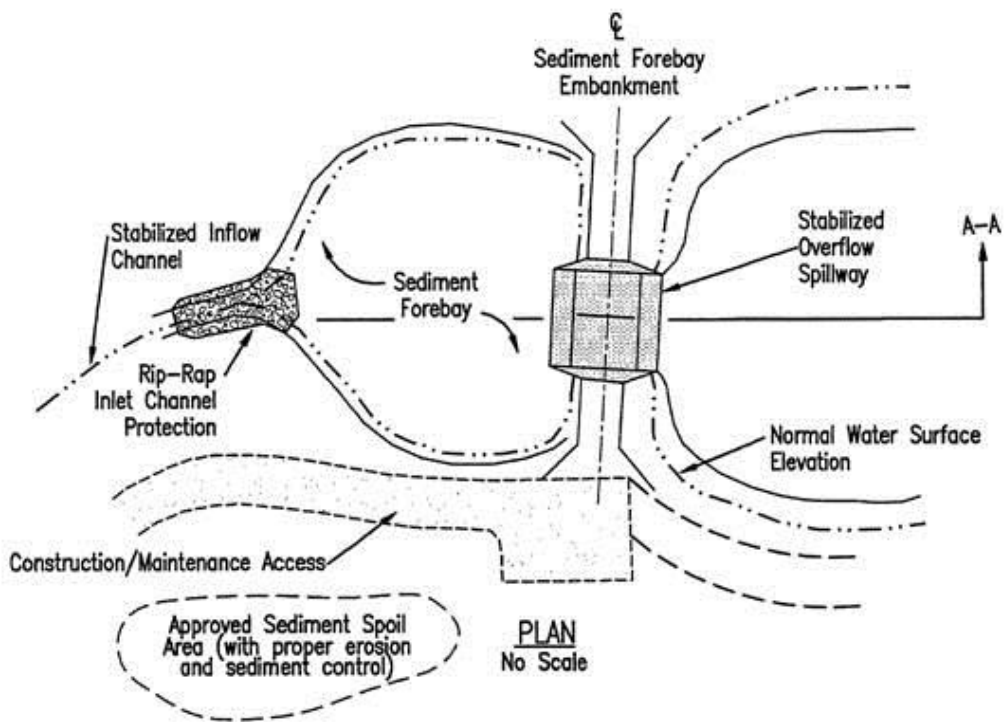

NOTE: _____
Stabilized overflow spillway shown as concrete. Riprap, gabion baskets, or other types of amoring may be used.